


WORLD MARKET®

Assembly Instructions

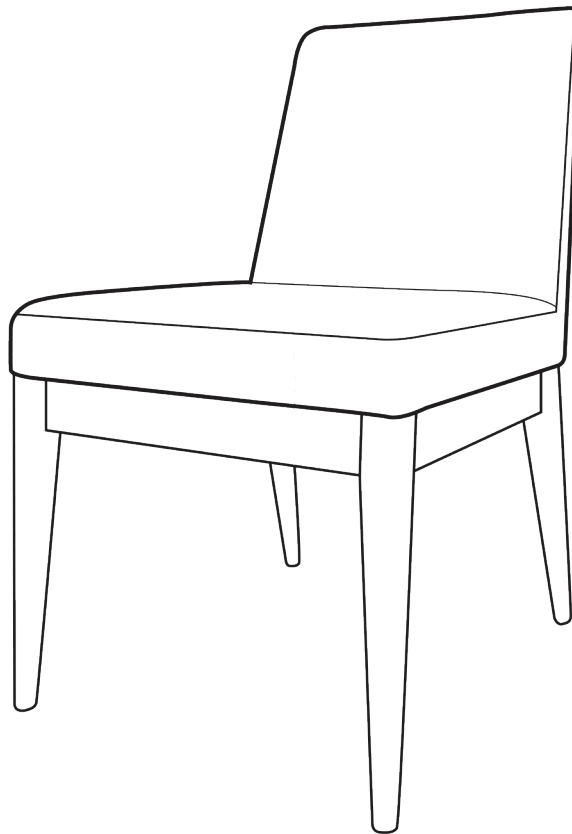



CALEB DINING CHAIR

SKU-596344


 



THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS
PERTAINING TO THE ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT
THE NEAREST COST PLUS WORLD MARKET STORE.
IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL
CENTER TOLL FREE AT 877-967-5367 FOR ASSISTANCE.

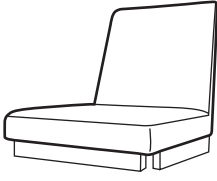
Component List

LABEL		DESCRIPTION	QTY.
A		Seat	1
B		Front Leg	2
C		Rear Leg (Left)	1
D		Rear Leg (Right)	1

Hardware List

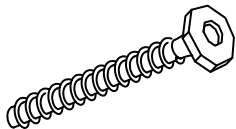
LABEL		DESCRIPTION	QTY.
H-1		KD Bolt M8x60mm	8
H-2		Flat Washer	8
H-3		Spring Washer	8

Hardware List

LABEL		DESCRIPTION	QTY.
T-1		Allen Wrench	1

Assembly Preparation

Before Beginning :

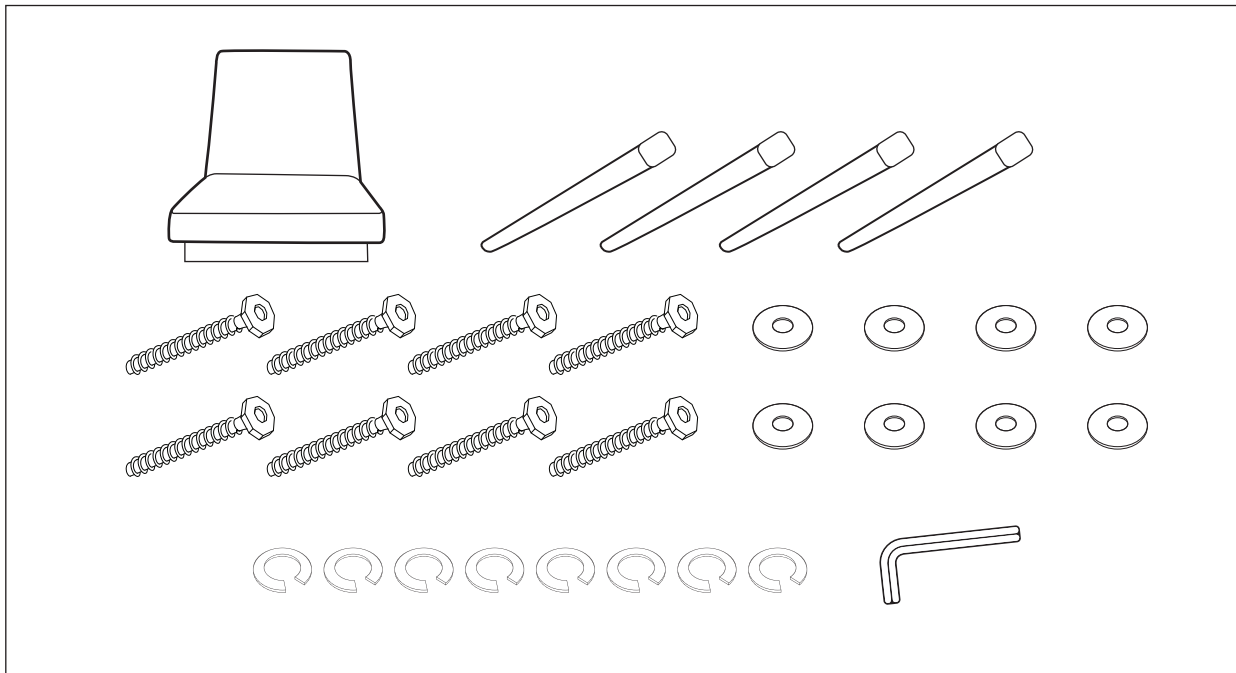

Unpack all hardware bags and components to ensure you have all parts.



Read instructions, cover to cover.



Have two adults on hand for assembly.



Do not assemble on flooring or carpet.



Assemble on a clean non-marring surface (packing foam).



Save all packaging until finished.



Incase of missing parts, please contact your nearest Cost Plus World Market Store or our customer service call center 877-697-5362.


Assembly Preparation

 
Step 1


 (H-1) KD Bolt M8 x 60mm x 4

 (H-3) Spring Washer x 4


 (H-2) Flat Washer x 4

(T-1) 

(H-1) 

(H-3) 

(H-2) 

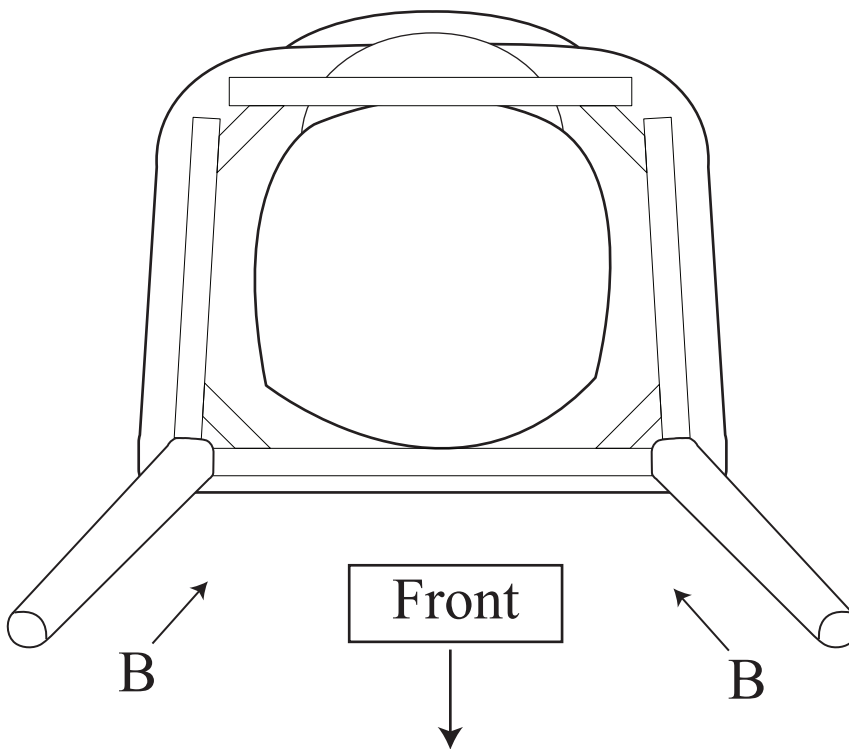



Place Seat (A) down onto a padded non-marring surface with the bottom side facing upwards. Unzip cover on the underside of Seat (A). Insert Front Legs (B) into position. Secure the legs using KD Bolts (H-1), Spring Washers (H-3) and Flat Washers (H-2) stacking the hardware in the order as shown. Fully engage bolts but do not tighten them until Step 3.

Step 2

 (H-1) KD Bolt M8 x 60mm x 4


 (H-3) Spring Washer x 4

 (H-2) Flat Washer x 4

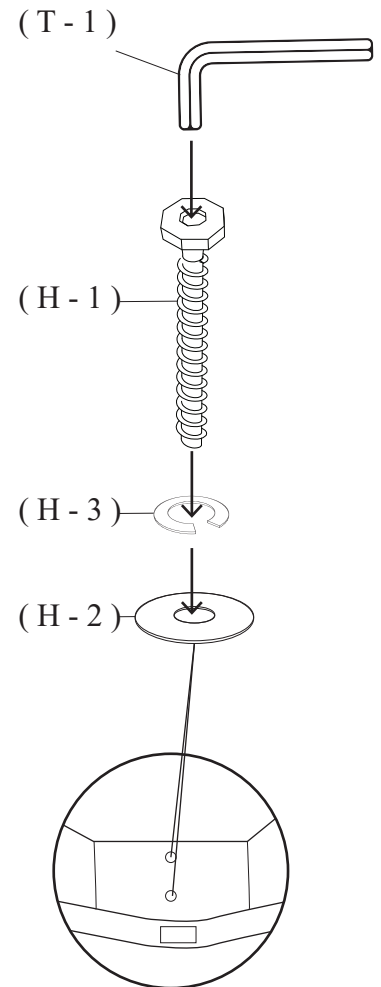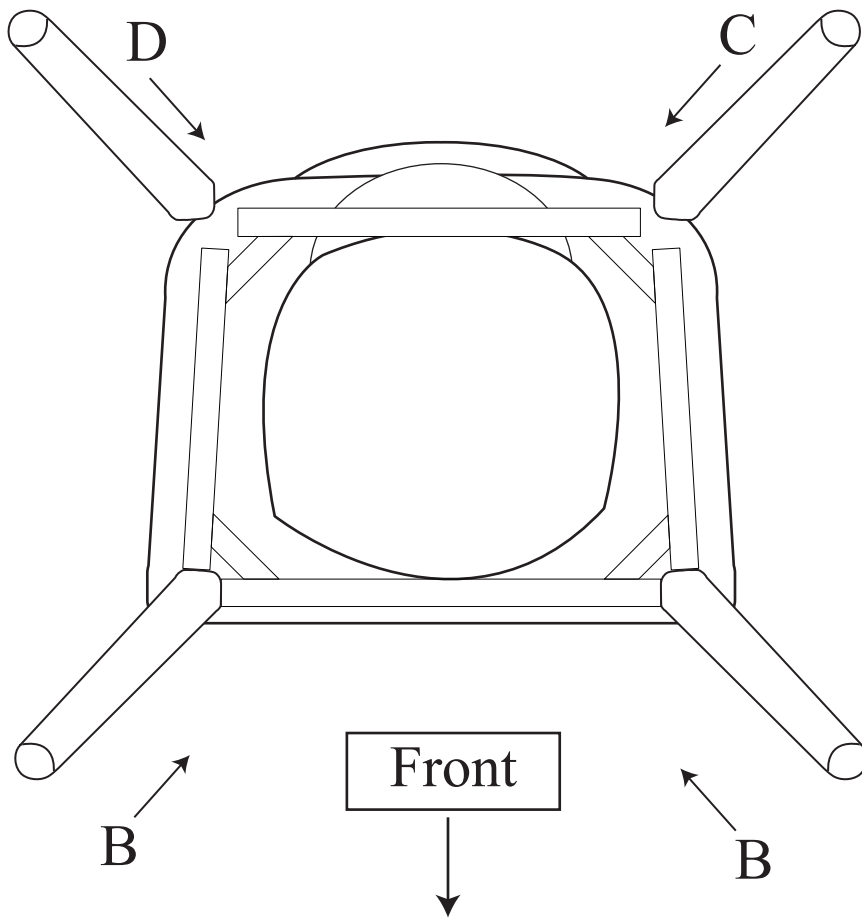

Insert Rear Legs (C),(D) into position. Secure the legs using KD Bolts (H-1), Spring Washers (H-3) and Flat Washers (H-2), stacking the hardware in the order as show. Fully engage all bolts but do not tighten them until Step 3.

Step 3

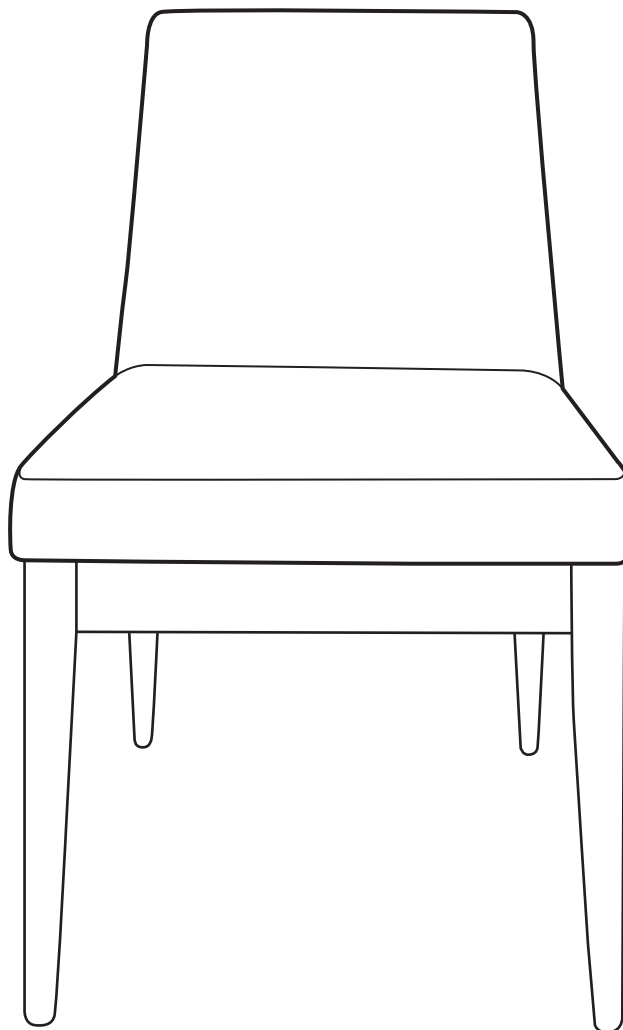

Carefully turn the chair assembly upright and ensure that it rests evenly and level on all four legs. Once level, carefully tilt the chair back down and fully tighten all KD Bolts (H-1) from steps 1-2 at this time using Allen Wrench (T-1). Zip the bottom cover of seat (A) closed once complete. The chair is now ready for use.

ENSURE ALL BOLTS ARE FULLY TIGHTENED EVERY 3 MONTHS TO ENSURE STABILITY

 
Care and Maintenance



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleaners or polish.



Do not clean furniture in direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.



Not for commercial use, for residential use only.



Dust and pick-up spills using a clean, non-colored, lint-free cloth