 


WORLD MARKET®

Assembly Instructions

22" AVA ROPE 3-TIER PENDANT

 

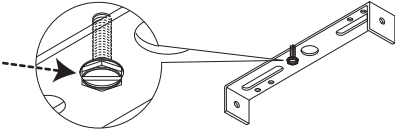 
 
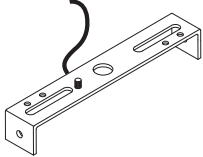 
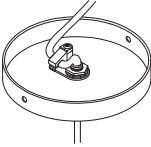 

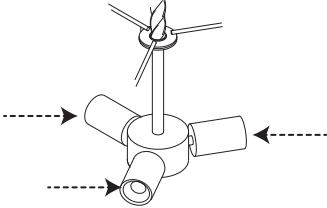 
SKU - 613806

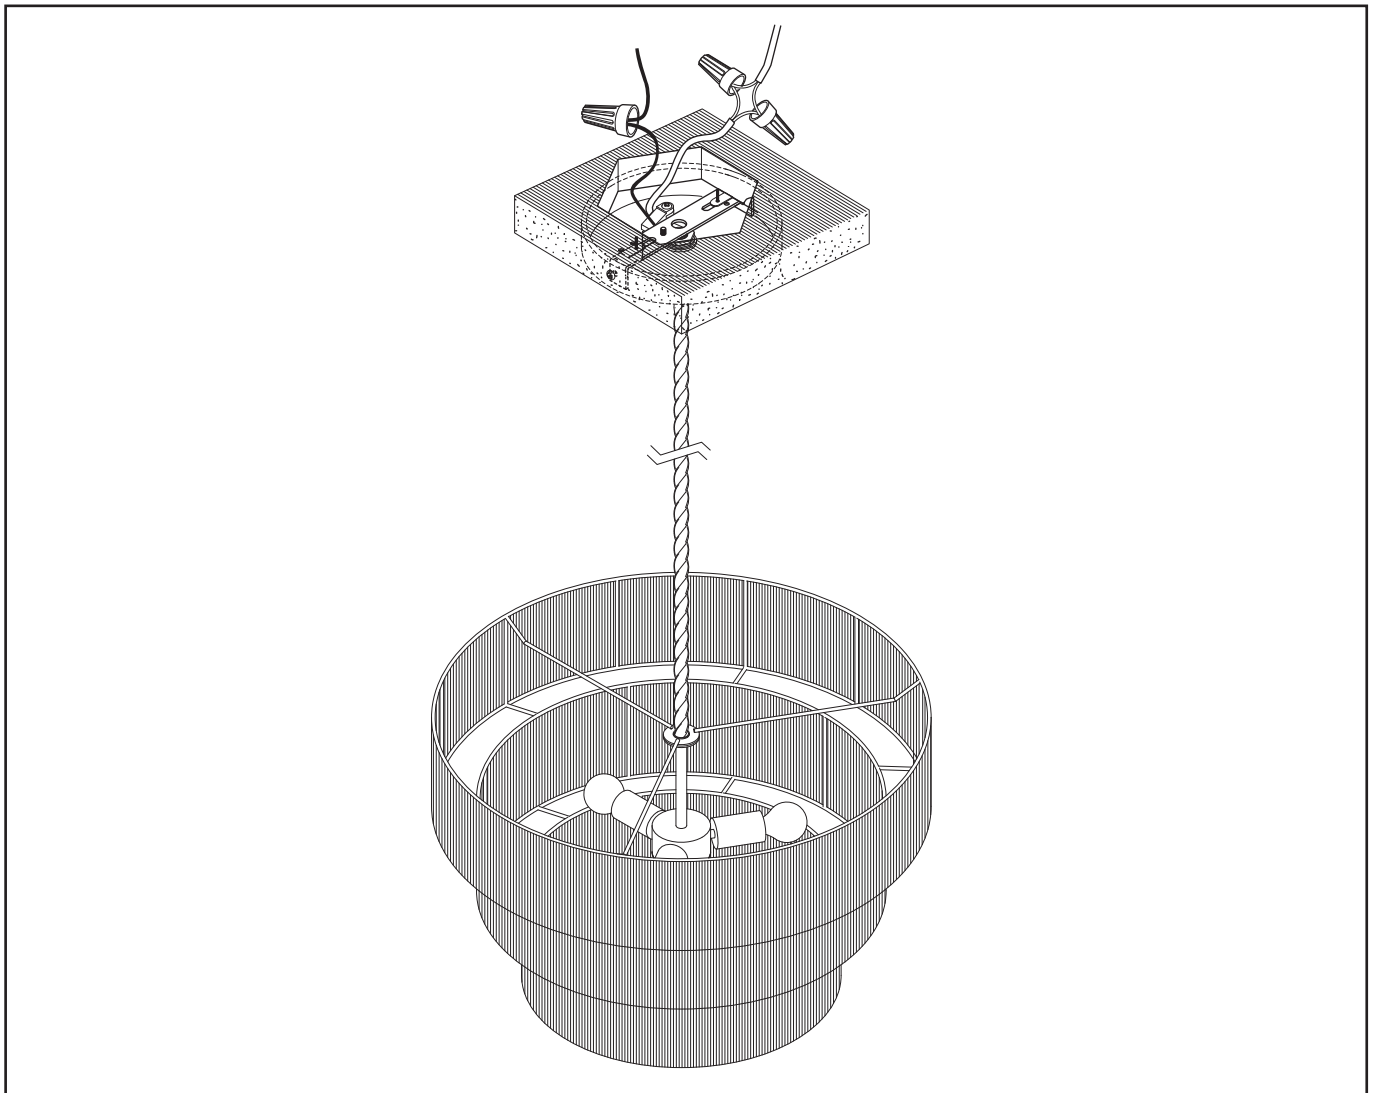


THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS PERTAINING TO THE ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT THE NEAREST WORLD MARKET STORE. IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL CENTER TOLL FREE AT 877- 967-5362 FOR ASSISTANCE.

NOT FOR COMMERCIAL USE.

Parts List (not to scale)

Label	Picture	Description	Qty
A		Mounting Screws	2
B		Canopy Screws	2
C		Green Ground Screw	1
D		Plastic Wire Connector	3
E		Mounting plate	1
F		Canopy	1
G		Shade	1
H		Socket	3

 Tool List (not to scale)


Label	Picture	Description	Qty
T-1		Phillips Screwdriver (not included)	1

CAUTION: Read ALL instructions and safety information completely. Professional installation is recommended.

FOR YOUR SAFETY: Shut off the power to the main electrical circuit supply before beginning any work. Lock out the circuit or the panel so no one can turn the circuit on during installation. If improperly handled, electricity poses electrocution and fire hazards.


Assembly Steps

Step 1

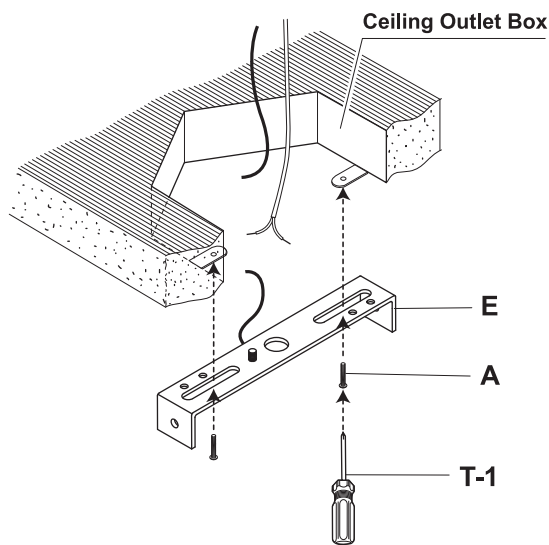


NOTE: Turn off main electrical power before beginning. Attach Mounting Plate (E) to the Ceiling Outlet Box using Mounting Screws (A) tighten with a Screwdriver (T-1) (not included).
NOTE: Screw slots in Mounting Plate (E) allow for adjustability

Step 2

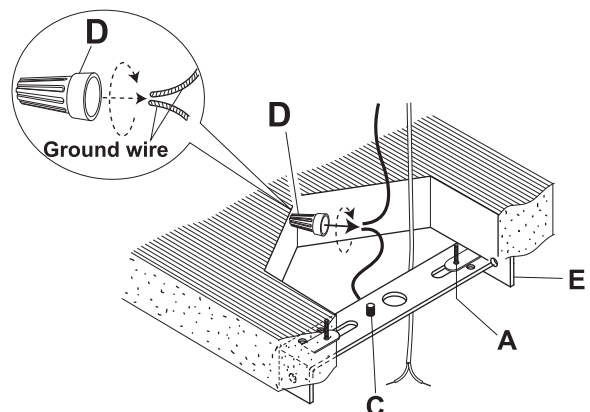


Attach the ground wire from the fixture to the ground junction box wire from the ceiling box (usually green), fasten each together with a Plastic Wire Connector (D) and wrap the connection with electrical tape (not included). If your ceiling box does not have a ground wire, insert the Green Ground Screw (C) into the Mounting Plate (E) facing down, and wrap the fixture's ground wire around the Ground Screw (C).

Step 3

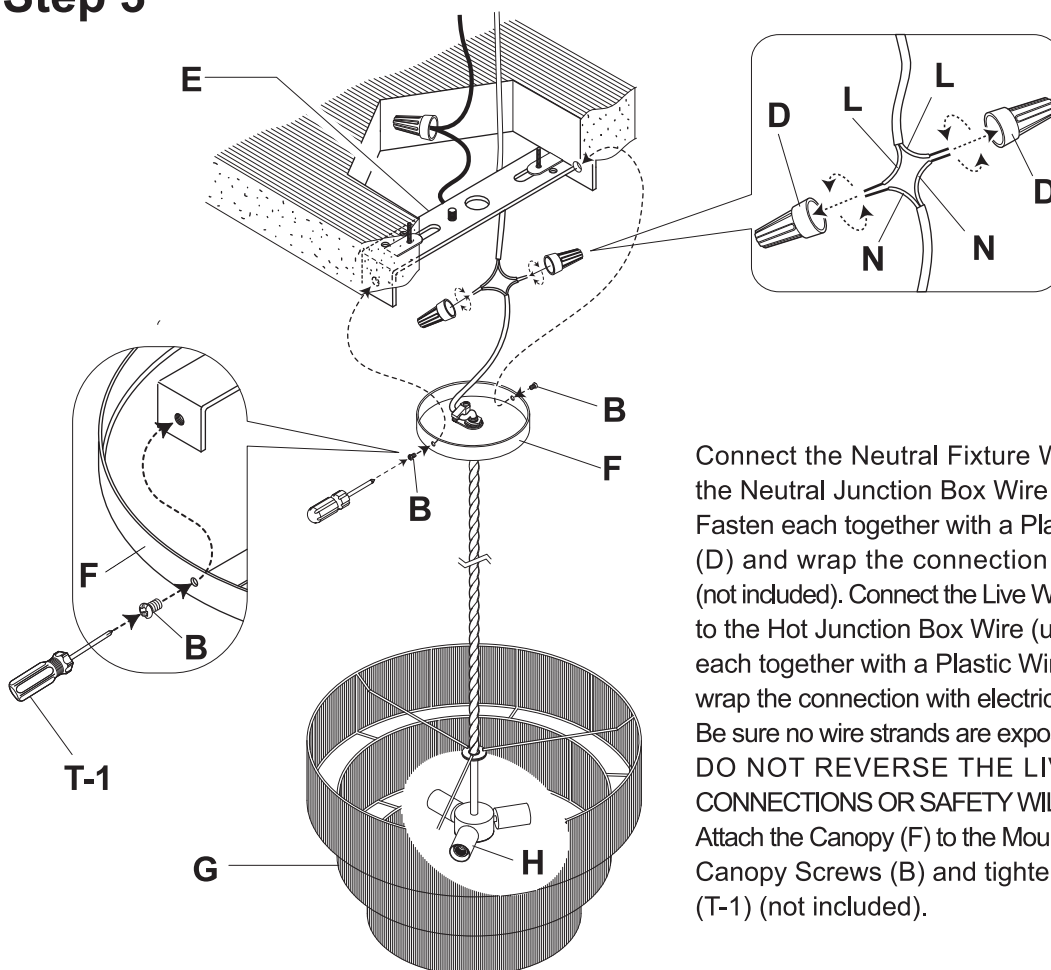


Connect the Neutral Fixture Wire (marked "N") to the Neutral Junction Box Wire (usually white). Fasten each together with a Plastic Wire Connector (D) and wrap the connection with electrical tape (not included). Connect the Live Wire Fixture (marked "L") to the Hot Junction Box Wire (usually black). Fasten each together with a Plastic Wire Connector (D) and wrap the connection with electrical tape (not included). Be sure no wire strands are exposed for all connections. **DO NOT REVERSE THE LIVE AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.** Attach the Canopy (F) to the Mounting Plate (E) using the Canopy Screws (B) and tighten with a screwdriver (T-1) (not included).

Step 4

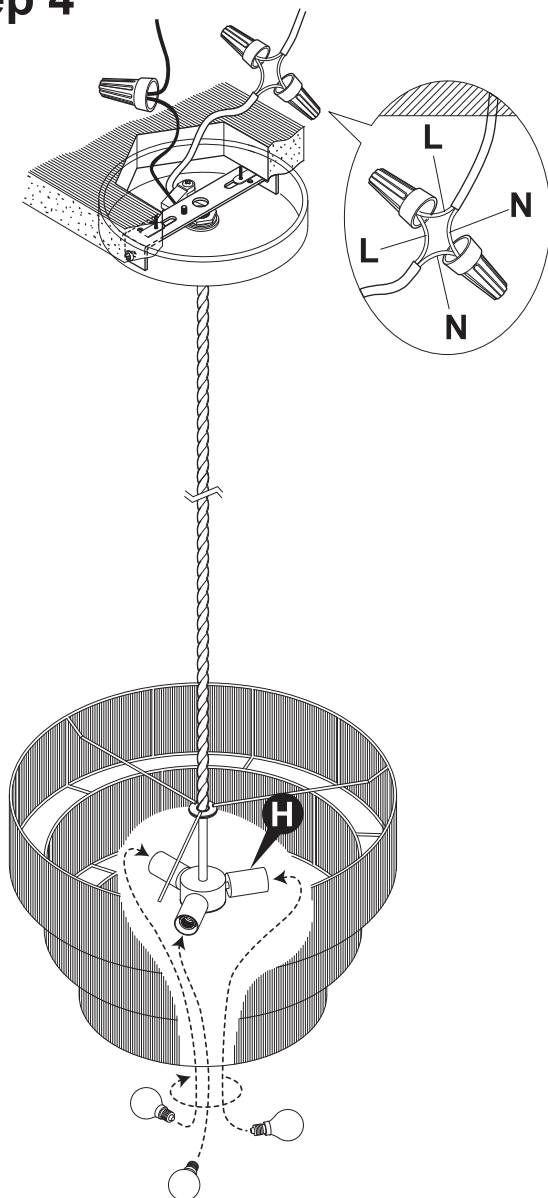

Attach the bulbs (not included) to the Sockets (H) then turn until tightened.

Step 5

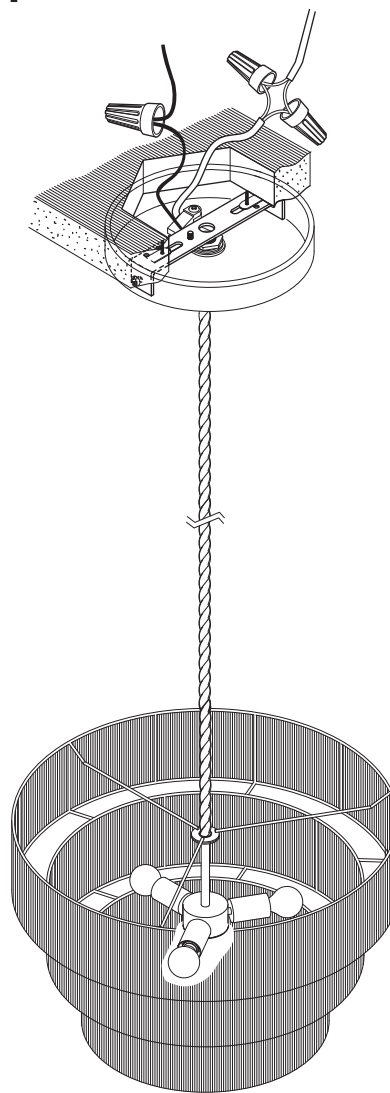

The Light Fixture installation is now complete. Turn power back on at the main electric circuit supply and check the light for operation.

To prevent risk of fire, do not use a light bulb with more than Type A 60W or 13W CFL bulb (not included).

WARNING: DO NOT TURN ON UNTIL LIGHT BULB IS INSTALLED AND ASSEMBLY IS COMPLETE.

Care & Maintenance

- Do not clean fixture with harsh cleansers or polish as it may damage finish.
- Do not place fixture outside. For indoor use only.
- Not for commercial use. For residential use only.
- Dust and pick up spills using a clean, non-colored, lint-free and soft cloth.